

# Installation Guide.


## Under Fence Plinth



- Retain the life of your fence and fill the gap underneath your 'Panel Fence' or 'Post and Rail Fence' by using an UFP from *Outback Sleepers Australia*.
- Prolong the life of the fence by preventing the steel (or other material) from sitting on the dirt and rusting.
- The UFP's available from *Outback Sleepers Australia* are designed to fit into a 50 x 50mm fence post.


### 1. Fence Posts.

- Install your fence posts as specified by the Fence panel manufacturer. **Note:** *Outback Sleepers Australia* recommends that the posts be extended and the hole dug a further 300mm deeper than the fence manufacturer's recommendation.

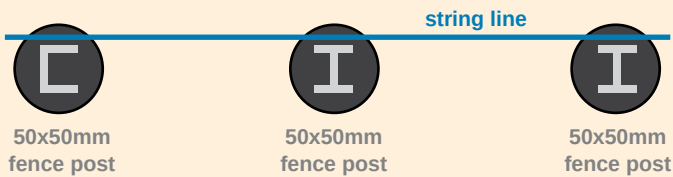


### 2. Remove Rail.

- Remove bottom fence rail.

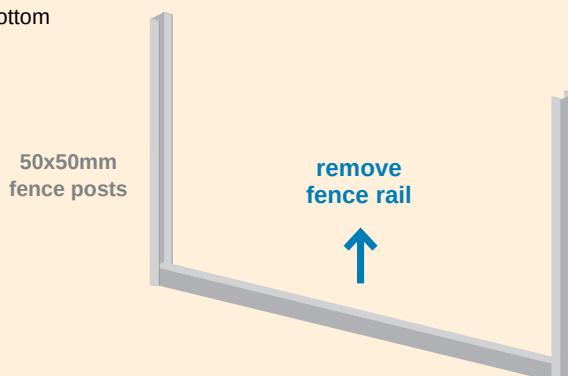


### 3. Concrete UFP.

- Insert concrete Under Fence Plinth in between posts.

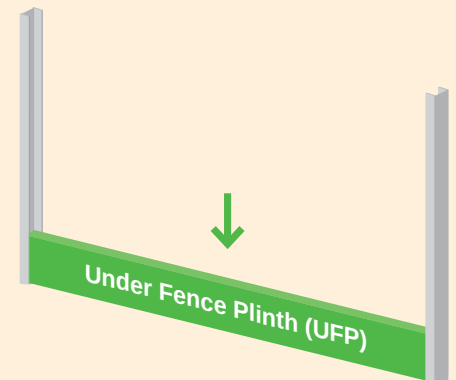

### 4. Replace Rail.

- Replace bottom rail, as per fence manufacturer's instructions.

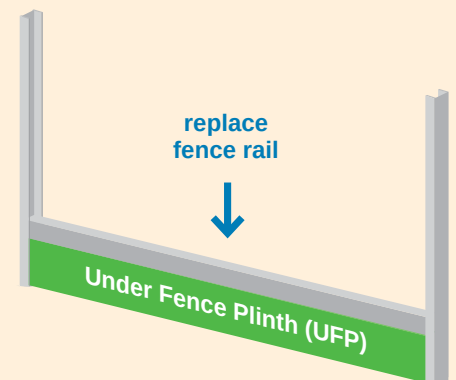

### 5. Fence Panel.

- Install fence panel, as per fence manufacturer's instructions.

